

Multi-functional Jump Starter and Power Bank

Instruction Manual



[Facebook.com/denverelectronics](https://www.facebook.com/denverelectronics)

Contents

Precaution	4
Safety Instructions/Warnings.....	4
General Warnings	4
Product Package.....	6
Product Diagram	7
Additional Functions	7
LCD Screen	7
LED Flashlight.....	8
Specification	9
Smart Clamp Functions	9
EN.....	9
EN.....	9
Safety Instructions	10
Nine Safety Protections.....	10
How to Charge Jump Starter.....	12
Safety Instructions	12
Charging Procedures	13
Safety Protections	13
Why cannot the appliance be charged?.....	14
Using the Appliance as a Jump Starter	14
Caution Before Using	14

Jumpstarting Procedure as Below.....	16
Caution When Using	17
Caution After Using.....	18
Charge Electronic Products.....	18
Specifikation för kontakt till bärbar dator.....	19
FAQ.....	21

Precaution

We appreciated your recent purchase of our product. Please read this manual deliberately before utilizing the appliance and hold it for future reference.

Safety Instructions/Warnings

Before using this unit, read and see all safety instructions and warnings carefully, basic safety precautions ought to dependably be taken after to diminish the danger of flame, leaking batteries, injury, and materials harm.

General Warnings

1. The appliance not expected for use by people with reduced physical, tactile, or mental capacities.
2. Children or Adults ailing in experience and information additionally should not work this machine unless he/she has given supervision or guideline concerning the correct use and notices of the apparatus by a man in charge of their security.
3. Use in a dry area as it were. Try not to permit the apparatus to wind up wet.
4. Do not submerge the apparatus in water.


5. Do not open the appliance to flame, serious warmth or combustible fluids.
6. Do not open the appliance to supplant the inside battery. No client replaceable parts are inside the jump starter.
7. Do not use this item where there are combustible vapor, gasses or dust present.
8. To reduce the risk of damaging plugs and cords, never pull the cable to remove the plug from a socket outlet.
9. Dropping, hitting or applying excessive amounts of force to the hope starter may damage the unit. And this could bring about loss of operation, electric fire or another undesired result.
10. Use just the charging connectors, and jumpstarting clamp gave in this package. Unapproved parts may bring about actual harm or damage.
11. If the fluid of item sprinkles into eyes or skins, do not rub the eyes, wash promptly with clean water and look for quick restorative consideration.
12. Never open or dismantle the machines as it will void your guarantee.
13. Separate gathering. This item should not discard with ordinary household waste. Isolate accumulations of utilized items and packaging permits materials to be reused and used once more.

Reuse of reused materials forestalls genetic contamination and lessens the interest for crude materials.

Product Package

1. AC adapter
2. Car charger
3. USB cable
4. Smart clamp
5. Jump starter
6. User manual
7. EVA zipper bag
8. Laptop cable
9. Laptop plug

Product Diagram

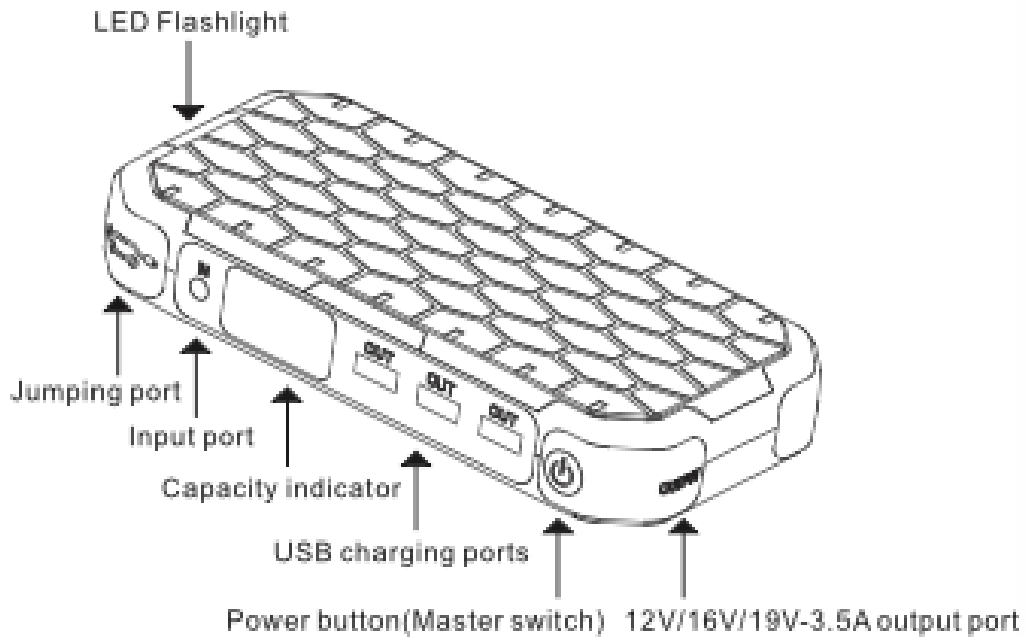

EN	EN
LED Flashlight	LED Flashlight
Jumping port	Jumping port
Input port	Input port
Capacity indicator	Capacity indicator
USB charging ports	USB charging ports
Power button (Master switch)	Power button (Master switch)
12V/16V/19V-3.5A output port	12V/16V/19V-3.5A output port

Additional Functions

LCD Screen

Press the power button, LCD will show battery level, output and battery symbol. When you utilize the appliance to charge your devices, the output voltage and current will be indicated on the LCD screen.

1. When charging jump starter, the charging symbol “IN” will flash on LCD; When completely charged, the battery level is 100%.
2. When utilizing USB charging, LCD will show current for 5 seconds and after that change to battery level. At the point when the battery level is lower than 20%, the battery symbol will glimmer to remind users charging.
3. If press power button and LCD does not display, it implies the battery has run out, the internal circuit will begin battery core protection naturally. Users require charge jump starter soon to keep cell center from harming for long-term self-consuming.

LED Flashlight

Keep pressing the power button for 3-5 seconds to start the LED flashlight. There are three modes of LED lights, follow steps:

- 1st Press: Normal white light
- 2nd Press: Slow white strobe light
- 3rd Press: Quick white strobe light
- 4th Press: Shut down flashlight

Specification

Battery Capacity: 10000mAh/37Wh

Battery Type: Lithium-ion battery cell

Starting voltage: 12V

Output: 5V/2A max 3A; 12V/16V/19V-3.5A

Input: 15V/1A

Cranking current: 300A

Peak current: 480A

Life Cycle: ≥ 500

Flashlight Power: 1W


Flashlight Lumens: 1W

Charging Time: 15V AC adapter takes 6-8hrs to full charge

Working temperature: -20 - 60°C

Humidity: 10-90%

Smart Clamp Functions

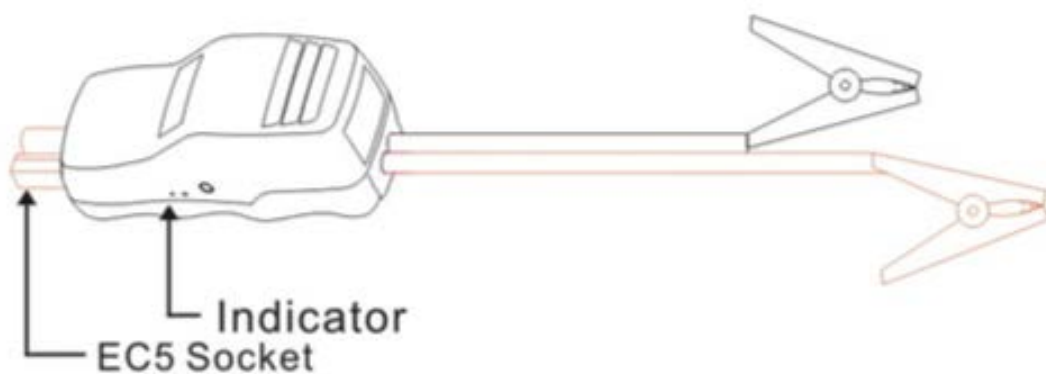

EN

EN

Indicator	Indicator
EC5 Socket	EC5 Socket

Safety Instructions

1. När den smarta klämman används, ska den röda och svarta klämman inte anslutas tillsammans eftersom risk för kortslutning föreligger och kan skada startkabeln.
2. If the product expands, please quit utilizing it.

Nine Safety Protections

1. Short Circuit Protection

When short circuit happens, the indicator red light of smart clamp will be on and alarm sound, the clamp will shut down output automatically.

2. Reverse Polarity Protection

The smart clamp can test whether the auto battery positive and negative interface accurately with the red and black clamp, if they associate inaccurately, the red indicator light will be on and alarm sound, clamp shut down output automatically.

3. Skydd mot omvänd laddning

Skador på startkabeln kan uppstå om den smarta klämman inte förhindrar automatisk laddning av batteriet från startkabeln,

4. Low-Voltage Protection

Normally the car battery voltage is 12V, it's possible the incoming voltage

of car battery is too low when jump starter starts the car because of low capacity. The indicator red light will be on and the smart clamp will shut down output automatically to keep the car battery being damaged.

5. Over-Voltage Protection

Normalt är bilens batterispänning 12 V, och det kan hända att spänningen överstiger 12V när startkabeln startar bilen på grund av den höga kapaciteten. Indikatorn lyser då rött och den smarta klämman kommer då att stänga av inmatning automatiskt för att förhindra att bilens batteri skadas.

6. Internal IC Components Malfunction Alarm

If there is any problem with inside IC components, the indicator red light will be on, and the smart clamp alarm sound consequently.

7. Clamp Dropping Alarm When Jumpstarting

While jumpstarting the auto, the indicator red light will be on and the smart clamp alarm sound consequently if the clamp drops from the terminals.

8. Compulsively Manual Switch Mode

Använd inte denna drift utan professionell vägledning. Det kan annars skada startkabeln , och medföra risk för säkerheten.

9. Test Car Battery Quality

The smart clamp can check auto battery quality. When car battery has been damaged, the indicator red light will be on and alarm sound

automatically, clamp shut down output automatically.

How to Charge Jump Starter

Safety Instructions


1. Använd inte några andra laddare, utan använd endast den medföljande laddaren för att ladda startkablarna.
2. Stäng av alla laddningsapparater när du vill garantera kortare laddningstid och säkra batteriutnyttjande.
3. Please do not jumpstart the auto while charging the appliance.
4. Be far from any unsafe source while charging the appliance, for example, combustible exhaust, gasses or water and so on.
5. Keep the temperature between 0°C - 40°C while charging.
6. During charging, if the product is warmth staining, please quit utilizing it, it might prompt to fluid spilling, smoking or smoldering.
7. Vanligtvis tar det 6 timmar för erhålla full laddning. Ladda inte apparaten mer än 10 timmar, annars kan produkten skadas.
8. Se till att anslutningen är korrekt och att nätadaptern är ansluten till vägguttaget. Om den inte laddas, kontakta återförsäljaren.

9. Kom ihåg att kontrollera om något inte fungerar som det ska med apparaten var tredje månad och ladda enheten varje halvår.

Charging Procedures


Technique 1:

Connect AC adapter Plugged into a socket Outlet to 15V input port Of the jump starter to Start charging.

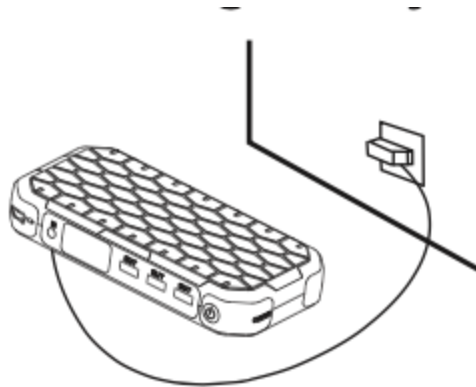

Technique 2:

Connect one end of car charger to 15V input port of the jump starter, then connect the other end to Cigarette lighter port to start charging.

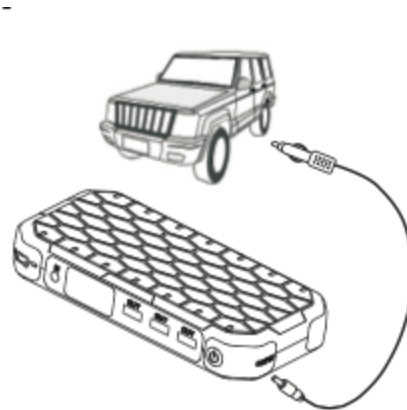

Safety Protections

1. Over Current Protection
2. Over-Voltage Protection
3. Short Circuit protection

När överström, överspänning eller kortslutning inträffar, kommer apparaten att stänga av in-/utmatning av ström automatiskt och ange skyddsläge för att undvika skador på apparaten och din enhet. Ta bort alla kontakter från apparaten och håll den sval och torr. Ladda sedan apparaten för att åter aktivera den.

Cautions:

1. Do not charge device immediately after starting.
2. Do not plug in clamp into device when charging.
3. Do not charge device over 10 hours.

Why cannot the appliance be charged?

1. Check whether the jump starter has been connected well with the charger and whether the charger has been plugged into power socket well.
2. Make sure the cable interfaces well with jump starter and auto cigarette light port.
3. If above all is well, the appliance still can't be charged, please contact sale after service for help.

Using the Appliance as a Jump Starter

Caution Before Using

1. Vehicles may have electrical and electronic systems that may be damaged if subjected to high starting voltages and voltage crests. Before connection the appliance to the vehicle, read the vehicle's owner's manual to confirm that external-starting assistance is allowed.
2. Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and whatever other conditions that may influence its operation.
3. Do not use the appliance if any part is damaged or flawed and contact after service for assistant.
4. Before starting the vehicle, check the battery level at least at 50%.
5. Check whether the item expands, distorts and smells peculiarly.
6. Clear up the dust on the electrodes of your auto battery before jump starting.
7. Before starting the vehicle, please ensure the air conditioning, car audio and other electronic gadget are closed off.
8. The appliance is not intended to utilize as a replacement for a vehicular battery. Try not to endeavor to work a vehicle that does not have a cell introduced.
9. The appliance can jumpstart any 12-volt vehicles, for example, motorcycles, autos, jeeps, steamships and so forth.


10. Remember there is an auto-off component on the jump starter.

What if you don't attempt to start your car within 30 seconds, it will consequently close itself off.

11. Before starting your car, make sure the vehicle is in neutral with the parking brake applied.

Jumpstarting Procedure as Below

1. Tightly interface the red clip to auto battery positive (+), black clip to negative (-), normally the green and red indicator light of smart clamp will flash alternately. If the connection is not correct, only red indicator will be on and alarm sound.
2. Open the rubber lid of jump start port, connect the EC5 of clamp to the port.
3. Start Auto: The appliance can start vehicle (up to 4.0L petrol or 2.0L diesel motor) up to 20 times with 480A peak current.
4. After starting auto, the green indicator light will be off and the red indicator light is still on, smart clamp alarm sound. Remove the clamp from auto battery instantly.
5. Finally, remove the EC5 of clamp from the jump starter port.

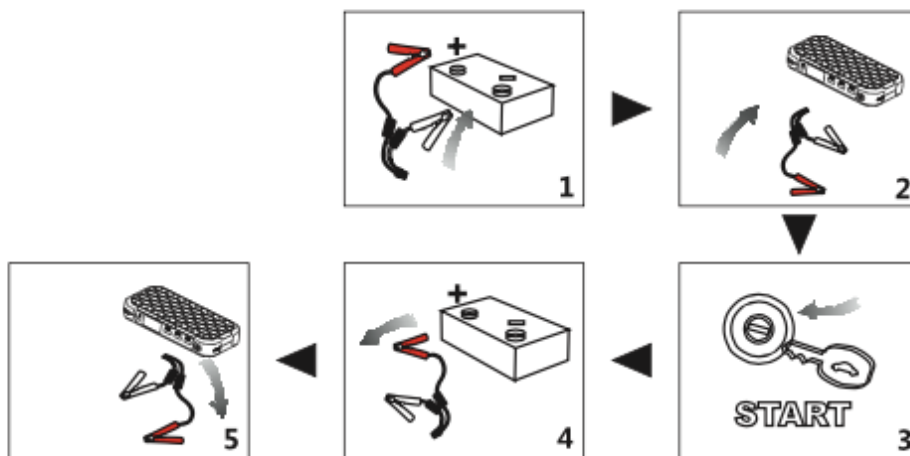

Viktigt:

Om den smarta klämman utlöser ett larm, kan det bli nödvändigt att plocka bort klämman från batteriet, dra ut den smarta klämman från startkabeln och börja om processen igen.

Caution When Using

1. Tightly interface the car clip plug, or it will influence starting vehicles, even cause car plastic liquefy down.
2. Each starting vehicle interim to 10 seconds, the constantly starting times is not more than 20 times.
3. If starting vehicle constantly for 3 times, regardless it doesn't succeed, please check whether the clip is free or interfaces accurately and whether the operation is right. What if despite everything it doesn't prevail after one more attempt, please contact customer service for help.

4. Efter att ha startat, anslut inte båda klämmorna med risk för att en olycka kan inträffa.

Caution After Using


1. When you are not utilizing it, store it in a dry place, well-ventilated place out of the reach of children.
2. Children should not have access to stored appliance.
3. The appliance should be out of direct sunlight, heat and moisture.
4. Before of self-consuming, we recommend that you check the appliance every 3 months and recharge it every half year to guarantee satisfactory performance when needed.
5. Never allow the red and black clamp to touch each other or another common metal conductor. We suggest storing the jump starter in the box in which it was initially received. Always be sure re-wrap cables and re-holster clamp after each use and before extended storage.

Charge Electronic Products

The jump starter has 3 USB outputs: 5V/3A max and 12V/16V/19V 3.5A

1. USB output: The appliance can charge most of the 5V input devices, such as Apple/iPhone, Android smartphones, iPad, tablet PC, a game machine, MP3/MP4, GPS, digital cameras etc.

2. 12V/16V/19V 3.5A output: Before turning on the main switch, short press it and you can switch the output between 19V 16V and 12V with light indicators on. Different digital devices require different voltage. For example, laptop may need 19V or 16V. So before use please confirm your required voltage. 12V/3.5A can power 12V tools like radios, navigation equipment, camcorders, etc.

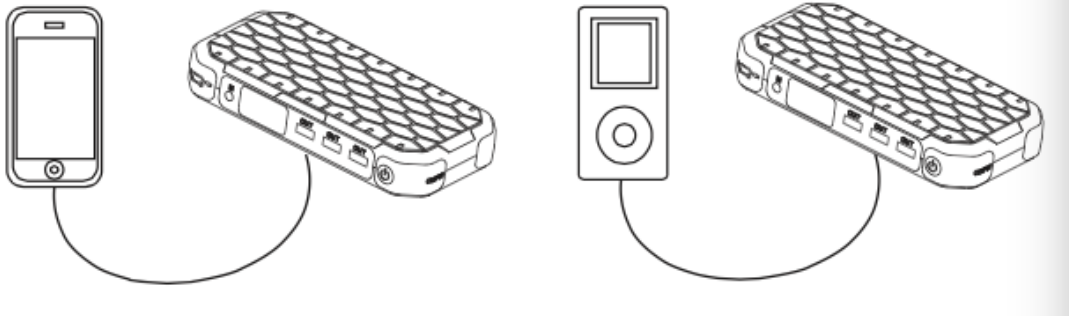

Notice:

If the power cannot charge the electronic products, please contact customer service after confirming the connection cable and port are excellent without damage.

Specifikation för kontakt till bärbar dator



Laptop Plug specification

A: 6.0*1.4 -- Sony, Fujitsu, Samsung
 C: 5.5*2.5 --Dell,IBM,Acer,Toshiba, etc
 D: 5.5*2.1 --Acer, IBM, Toshiba, Lenovo, etc.
 E: 5.5*1.7 --Acer, Sony
 H: 5.0*1.0 --Samsung
 F: 4.8*1.7 --HP, ASUS, etc.
 I: 7.4*0.6 --HP, Dell
 K: 7.9*0.9 --Lenovo, IBM

EN	SE
Laptop Plug specification	Specifikation för kontakt till bärbar dator
A: 6.0*1.4 - Sony, Fujitsu, Samsung	A: 6.0*1.4 - Sony, Fujitsu, Samsung
C: 5.5*2.5 - Dell, IBM, Acer, Toshiba. etc.	C: 5.5*2.5 - Dell, IBM, Acer, Toshiba. etc.
D: 5.5*2.1 - Acer, IBM, Toshiba, Lenovo, etc.	D: 5.5*2.1 - Acer, IBM, Toshiba, Lenovo, etc.
E: 5.5*1.7 --Acer, Sony	E: 5.5*1.7 --Acer, Sony
H: 5.0*1.0 - Samsung	H: 5.0*1.0 - Samsung
F: 4.8*1.7 -HP, ASUS, etc.	F: 4.8*1.7 -HP, ASUS, etc.
I: 7.4.0.6 -HP, Dell	I: 7.4.0.6 -HP, Dell
K: 7.9*0.9 -Lenovo, IBM	K: 7.9*0.9 -Lenovo, IBM

FAQ

Q: How many times of jump starting can I get from the device before recharging?

A: A large number of factors influence the answer, including the following: the period for every jump starter, the charge level of the original battery, time allotment between jump starts, vehicle temperature being kicked off, the size of the motor, the mechanical condition of the engine and starter and more. These variables should all be weighed on an individual premise before an accurate answer can give.

Q: How do I turn off the jump starter?

A: The jump starter will power off automatically when not in use.

Q: After starting, can I leave the until hooked to the battery to recharge the jump starter while the engine is running?

A: No. Attempting to recharge the jump starter by this method is not allowed. Vehicle alternators output will be from 25-125 amps. This charging rate greatly exceeds the recommended recharging rate for the device. Charging by this way will cause in overcharging the jump starter battery and may void the product warranty.

MED ENSAMRÄTT, UPPHOVSRÄTT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Elektrisk och elektronisk utrustning och tillhörande batterier innehåller material, komponenter och ämnen som kan vara skadliga för hälsan och miljön om avfallet (kasserad elektrisk och elektronisk utrustning och batterier) inte hanteras korrekt.

Elektrisk och elektronisk utrustning och batterier är märkta med en symbol i form av en överstruken soptunna (syns nedan). Denna symbol visar att elektrisk och elektronisk utrustning och batterier inte bör slängas tillsammans med annat hushållsavfall, utan ska istället slängas separat.

Som slutanvändare är det viktigt att du lämnar in dina använda batterier i en för ändamålet avsedd facilitet. På det viset säkerställer du att batterierna återvinns lagenligt och att de inte skadar miljön.

Alla kommuner har etablerat uppsamlingsställen där elektrisk och elektronisk utrustning och batterier antingen kan lämnas in kostnadsfritt i återvinningsstationer eller hämtas från hushållen. Vidare information finns att tillgå hos din kommuns tekniska förvaltning.

Importör:

Inter Sales A/S

Omega 5A, Soefte

DK-8382 Hinnerup

Danmark

www.facebook.com/denverelectronics