

WARNING

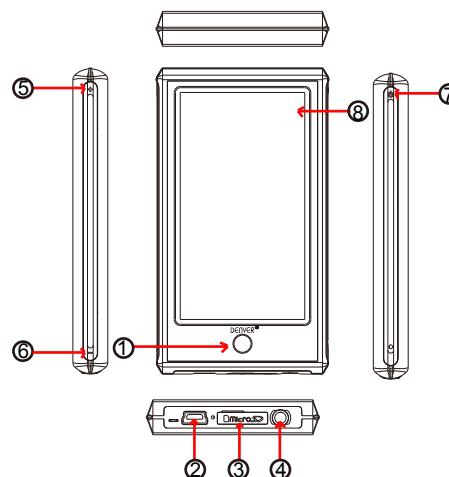 
Read Safety Instructions Before Making Volume Changes

Safe use depends on exposure time and volume levels.

Volume at 80 dB(A), exposure should be limited to 40 hours/week. At 89 dB(A) exposure should not exceed 5 hours/week.

Product view and key function

- ① Return button
- ② USB socket
- ③ MicroSD socket
- ④ Earphone Jack
- ⑤ Volume up
- ⑥ Volume down
- ⑦ Switch button
- ⑧ Touch screen



This player has touch screen. Settings/controls are made by pushing the icons on the screen.

First time use

We suggest you charge the unit for approximately 8 hours before first time use. To charge it you have to connect it to a pc with the included USB cable. The pc has to be turned on during the charge.

Turn on



Hold switch button about 3 seconds to turn on the unit. Now you are ready to enter the main interface.


Main menu

There are 10 icons for this unit, such as setting, game, E-book, music, video, record, calendar, time, calculator and photo. Now let's introduce several main functions.

Music

Push music icon to enter submenu. There are many choices, such as all music, artist, album etc. You can push and enter what you choose. But remind, if you want to delete music files, push dir list to choose files to delete.

In the music playback, push  " can return former menu, push  " can

enter repeat mode and play mode, push  " can change different screen and show lyrics, click EQ can enjoy different music feeling.





Repeat mode: once, repeat, all repeat, intro

Play mode: in order, shuffle

 


 
 
 

EQ choice: normal, rock, pop, classic, bass, jazz, user EQ

"A-B" repeat function: push "A-B" first time, "A", which is the beginning of repeat section, will appear in the below center of screen, push "A-B" again, "B", which is the ending of repeat section, will appear now, then it will repeat what you choose, finally push "A-B" third time, it will cancel repeat.





Record

Push record icon to enter record mode. Then push  " to start record, you can stop recording by push  " once again, and push  " can pause and choose save the record file or not, push  can save the file directly.

Video

Push video icon to choose video files to play. in the video playback, you can push  to return former file list, push  to stop playing the file, press  can skip to the next file, long press  to fast forward, press  can skip to play the previous file, long press  to fast backward. Also you can push  to adjust the playback interface.

Photo

Push photo icon to see the picture. in the photo playback, you can push  to amplifier the picture, push  to downsize the picture, also you can push  to spin it right, push  to spin it left.

Setting

Push setting icon to enter submenu: display setting, system setting, language, system information, auto shut time, touch screen check, time setting.

Return button

Hold circle button is always used to get to the main menu.

How to copy files to the MP4 player:

Please connect to a pc, using the included USB cable.

Now go to "this computer". And you can see an extra driverletter has appeared.

This is the MP4 player. Let's call the driveletter e: (this can varie due to differences in computers)

Open this driveletter, and you can now copy **MP3** files, **JPEG** photos to the player. You can copy whole MP3 albums to the player. The MP4 player can see it even if it is in a folder.

Files playable:

Audio: **MP3, WMA, APE, FLAC, AAC**

Photos: **JPEG, BMP, GIF**

Video: **RM/RMVB, AVI, WMV, 3GP, FLV**

E-book: **TXT**

We hope you like your new MP4 player, and will enjoy many hours of entertainment.

Please note:

- a) Design and characters may change for product improvement without prior notice.
- b) Lithium battery inside. Battery must ONLY be removed by authorized personal
- c) This model cannot playback DRM protected WMA files, such as sound books, songs bought from internet etc



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

ALL RIGHTS RESERVED

DENVER ELECTRONICS A/S



WWW.DENVER-ELECTRONICS.COM