DENVER SAX-10BLACK

Aux Selfie Stick



Disclaimer

Denver Electronics A/S will under no circumstance take responsibility for any damage done to your mobile phone while using the Aux Selfie Stick (SAX-10). So please handle stick with care and make sure that the mobile phone is mounted properly in the selfie stick holder and that the mobile phone holder is fixed before using the product.

Instructions for use


Please read all instructions carefully.

Some Android phones need to download **Camera360 Ultimate** app to make the selfie stick work.

 Place the mobile phone in the phone bracket and Aux cable in device's port then start your phone's camera function. Extend the selfie stick and press the camera shutter button on the stick to take your picture.

1st Step

Place your smart phone into the phone bracket

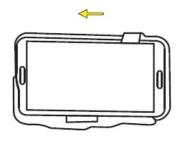

3rd Step

Extend the monopod



2nd Step

Connect the Aux cable in device's port



4th Step

Focus on yourself and push the camera shutter button on the handle to take your selfie



ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S



www.denver-electronics.com



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Imported by:
DENVER ELECTRONICS A/S
Stavneagervej 22
DK-8250 Egaa
Denmark
www.facebook.com/denverelectronics