
SDQ-55044L BLACK



User Manual

DENVER[®]
denver-electronics.com

Table of Contents

Table of Contents	2
Important safety information.....	3
Device overview.	4
1. Getting Started.....	5
1.1 Installing Cards.	5
1.2 Powering On/Off The Device.	6
2. Settings.	7
Network & Internet.....	7
Wi-Fi.....	7
3G/4G.	7
Bluetooth.	8
Display.	8
Storage.....	8
Battery.	9
Apps.	9
Accounts.....	9
Location.	9
Security.....	9
Setup Screen Lock.	10
Enable or Disable SIM card PIN.....	10
Language & Input.	10
Backup & Reset.....	10
Date & Time.	10
Accessibility.....	11
About Phone.....	11

Important safety information

WARNING: Read all the safety information below before using this Smartphone.

1. For the electrostatic discharge (ESD) test of EN55035, it was found that manual operation (by switching power ON/OFF switch) is needed to resume normal operation as intended after the test.

2•This device has Lithium battery,do not expose to heat, water, moisture, direct sunlight!

3.To reduce the risk of fire or electronic shock,do not exposed this device to dripping or splashing and do not place objects filled with liquids, such as vases on the device.

4•Only charge with the original adapter supplied with this product!

The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.

 
5. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

6. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

To reduce the risk of electric shock, do not remove cover as there are o user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

7. Correct Disposal of this product. It means that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

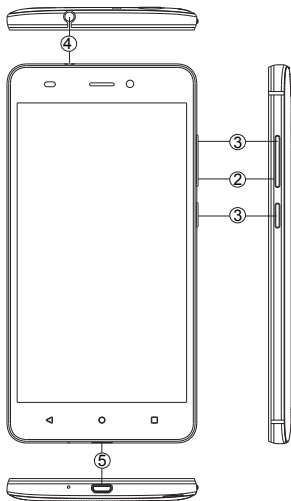

DEVICE OVERVIEW

Position of Keys

1. Power Key

2. VOL -

3. VOL+

4. Earphone Jack

5. USB Connector

1. GETTING STARTED

 
1.1 INSTALLING CARDS

Please switch off your device before inserting or removing the SIM card or memory card.

Installing SIM Card

Your device is provided with two SIM slots for two different SIM cards. In order to install SIM card in the device, please follow the steps mentioned below:


- Remove the back cover of the device.
- Hold the device with the front facing downwards.
- Remove the battery
- Insert the SIM card in the device.



Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage. Please follow the steps mentioned below to install the memory card in the device:

 - Switch off your device.
- Remove the battery
- Slide the T-Flash card into the slot.



Charging the Battery

The device prompts a warning tone and message stating insufficient battery when the battery power is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging.....  Fully Charged..... 

You must fully charge the battery before using the device for the first time. It is recommended to charge the battery for three hours before using the device for the first time.

1.2 POWERING ON/OFF THE DEVICE

 
Turning On the Device

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home/idle Screen.
- Drag the lock icon towards to unlock the screen.
- If the screen turns off, then press the Power Key to turn on the display.

Turning Off the Device

- Press and hold the Power Key for 2 seconds.
- A pop-up window appears, select Power off.



2 SETTINGS



Select Settings to view and adjust the settings of your device. The Settings menu is categorized into: Wireless & networks, Device, Personal, Account and System.

NETWORK & INTERNET

Access this sub-menu to view and manage the roaming settings of the SIM cards, view and change the Wi-Fi, Data usage, Mobile Networks, VPN and so on. Please refer to network section for detailed information on Wi-Fi.

WI-FI

Connect to a wireless network to browse Internet.

- Enter Main Menu and tap Settings.
- Tap  to activate Wi-Fi.
- Tap Wi-Fi to start detecting networks. The available networks will then be listed.
- Tap  to add a connection.

Note:

- If the device before the connection is successful, the equipment information will be saved in the pop-up window selected connection, select forget to remove device information.
- If the device does not encrypt selected connection in the pop-up window to connect.
- If the device is encrypted, the pop-up window will appear, enter the password.
- Network connection is successful; the status bar icon appears Wi-Fi connection.

3G / 4G


The device supports WCDMA/LTE protocol. Please make sure that you device is turned off, then insert or remove the SIM card.

Settings > Networks & Internet > Mobile network

- Power off, insert SIM card.
- Power on.
- Open setting, select Networks & Internet.
- Select mobile network, enter 'Access Point Names' interface.
- Touch menu button, select New APN;
- Set as below:
- Name: (any name like airtel).
- APN: airtelgprs.com.
- Touch menu button, select save.
- Go back to access point names interface, confirm the new APN selected.

BLUETOOTH

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Access Settings by entering the main menu.
- Click  to turn on Bluetooth.
- To make your device discoverable, select Bluetooth settings and check discoverable.

DISPLAY

With this function you can configure the display characteristics of the device including brightness, Wallpaper, etc.

STORAGE

View and manage the data storage of your device:

Total Space and Available Space: Lists the amount of space on the microSD card installed in your device and the amount you have used to store photos, videos, music, and other files.

Un-mount SD Card: Un-mounts the microSD card from your device so that you can format the card or safely remove it when the device is on.

Available Space: The amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

BATTERY

You can check the battery status of the device by accessing this sub-menu.

APPS

This sub-menu enables you to manage all the installed that saved in the device memory and SD card. You can remove and manage installed applications, allow installation of non Spice build in market applications.

ACCOUNTS

Use this function to add, remover, and manage your Google™ and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

LOCATION

Your device supports Global Positioning System. The settings related to the location and AGPS can be configured using this sub-menu.

SECURITY

You can protect your device from unauthorized users by setting the PIN code or entering a password.

SETUP SCREEN LOCK

You can set up a lock for your screen in form of Pattern, PIN code or password.

- Go to Settings > Security.
- Set up screen lock.
- Select a desired form (Slide, Pattern, PIN or password).

ENABLE OR DISABLE SIM CARD PIN

When PIN code is enabled, you are required to enter the PIN code before making a call.

- Go to Application Drawer > Settings > Security.
- On the SIM card lock tab, select Set up SIM card lock.
- Use PIN to Lock SIM card. Click to enable/disable.
- Enter the current PIN code.
- To change the PIN code, select Change PIN.
- Enter the old PIN code.
- Enter the new PIN code and confirm.

LANGUAGE & INPUT

Use the Language & input settings to select the language for the text on your device and for configuring the onscreen keyboard, including words that you've added to its dictionary.

BACKUP & RESET

You can use the Privacy settings to manage your personal information, such as backup of the data, automatic restore and factory date reset.

DATE & TIME

You can select to set date, time and time zone using this sub-menu.
Use Automatic unless you need to override the network values.
Use 24-hour format: Select to set 24-hour formats on or off.

ACCESSIBILITY

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your device.

ABOUT PHONE

You can view system information including Build number, Status, Legal information, Model number, Android version and so on.

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type SDQ-55044L is in compliance with Directive 2014/53/EU. The full text of the EU declaration of con-formity is available at the following internet address, please enter: www.denver-electronics.com and then click the search ICON on topline of website. Write modelnumber: SDQ-55044L. Now enter product page, and red directive is found under downloads/other downloads.

Wifi Operating Frequency Range: 2412MHz~2472MHz

Max Output Power: 10dbm

Bluetooth Operating Frequency Range: 2402MHz~2480MHz 2G/

3G/4G Operating Frequency Range: 880MHz~2170MHz

Google™, Google™ Play and other marks are trademarks of Google™ LLC.

Imported by:

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denverelectronics