

Congratulations on your purchase and thank you for your use of our Bluetooth Active Noise Cancelling Headset. In order to start quickly, please read the user guide carefully.

Caution

1. Please turn off the headset and put it into box to avoid damage, scratches or bracket deformation when long time no use. In order to prolong the battery service life, please charge every 6 months.
2. Please charge at first if the headset is left unused for long time.
3. The battery of headset is original and please don't change it by yourself.
4. Please keep the headset under dry place.
5. Please don't put this product into the environment with temperature over than 60°C or into fire to avoid battery blast accident.
6. Please don't bent or twist the bracket to avoid deformation.
7. Please don't tear down ear-cushions by un-professional person.
8. Don't adjust the volume to a very high level and continued play. If tinnitus occurs, please turn the volume down or stop playing, do not turn the volume up suddenly. Please slowly turn up the volume to avoid hearing damage caused by high volume.
9. Do not use the headset in dangerous place or place where cannot hear the outside sound.

Included:


The headset contains the following parts:

Bluetooth Active Noise Cancelling Headset X 1

Manual X 1

3.5mm – 3.5mm audio Cable X 1

Micro USB Charging Cable X 1

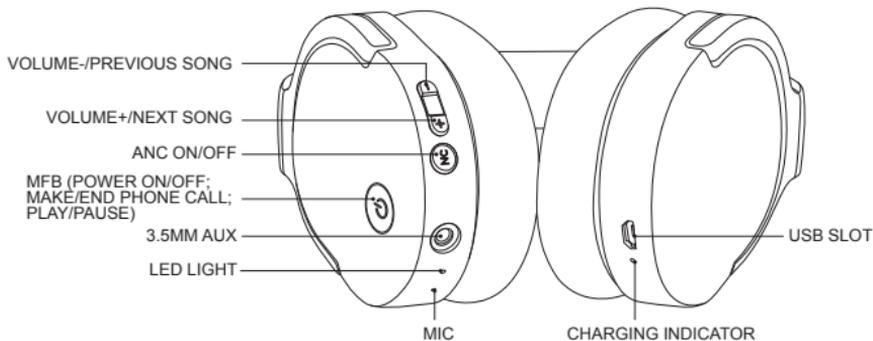

Charge the Battery:

The headset contains a Micro USB cable that can be connected to your computer or

other device made for USB charging. Plug the Micro USB end of the included USB cable into the USB micro port charger connector under the left ear-cap of the headphone. Plug the other end into a USB port on your computer or other devices made for USB charging. The indicator light will be red while charging. Once fully charged, the indicator light will turn off. Charge time is about 3 hours on an empty battery.

Active Noise Cancelling On:

Hold the ANC button for 1 second. Green LED light will turn on. The ANC function is available at both Wired and Wireless condition.

Active Noise Cancelling Off:

Hold the ANC button for 1 second. Green LED light will turn off. The ANC function must be switched off by manual operation.

Bluetooth Switch On:

To switch on, press and hold the MFB about 3 seconds. The headset enters Bluetooth searching mode. Blue light on.

Bluetooth Switch Off:

To switch off, press and hold the MFB about 3 seconds.

Pairing:

1. Ensure that your phone or Bluetooth device is switched on.
2. To pair the headset if it has not been previously paired with a device, switch on the headset. The headset enters the pairing mode, and the blue indicator light starts to flash quickly. To pair the headset if it has been previously paired with another device, ensure that the previously paired device is switched off.
3. Activate the Bluetooth feature on your phone or Bluetooth devices, and set it to search for Bluetooth devices.
4. Select "Denver BTN-207" from the list of found devices on your phone or Bluetooth devices.
5. When successfully connected, the blue light turns to continuously lighting.

The headset that has been previously paired with another device will automatically connect with the device if the device is power on and within connecting range, if not, the headset will enter standby mode with continuously blue light.

Adjust the volume:

Turn the volume up or down by a quick press on the volume +/- key during a call or while listening to music. When the volume reaches to Maximum volume, there is a warning tone.

Application:

Denver BTN-207 can make and receive calls hands-free with your compatible mobile phone and listen to music from a compatible Bluetooth device, but they should be with 10 meters (33 feet) of each other.

The headset is compliant with the Bluetooth Specification 4.1 support the following profiles: Headset Profile (HSP) V1.6, Hands-free Profile (HFP) V1.5, Advanced Audio Distribution Profile (A2DP) V1.0, and Audio Video Remote Control Profile (AVRCP) V1.4 input rating 5V DC, 0.5A

Calls:

To make a call, use your mobile phone in the normal way when the headset is connected to it. Quickly Press the MFB twice to call the last number in the call list. When a phone call comes in, quickly press the MFB to answer it, or long press about 1.5 seconds to reject the call. Call is ended when short press MFB during a call.

Listen to Music:

To listen to music, connect the headset to phone or compatible Bluetooth devices that support A2DP Bluetooth profile. The available music functions depend on your Bluetooth devices. If you receive or make a call while listening to music, the music is paused until the call ends.

To play a song, select in the music player and press the Play/Pause key on the headset.

To pause or resume playing a song, press the Play/Pause key.

To select the next song during playback, press and hold the volume up key.

To select the previous song, press and hold the volume down key.

To increase the volume, press the volume up key quickly, there will be beep town when reaching max volume.

To decrease the volume, press the volume down quickly. (Until Mute)

Disconnect the Headset:

To disconnect the headset from your device, switch off the headset, or disconnect it in Bluetooth menu of your device.

Reconnect the headset:

To connect the headset to the phone or Bluetooth devices that you have last used with it, switch on the headset, or make the connection in the Bluetooth menu of your device.

Passive Mode:

You can use Denver BTN-207 as a wired headphone to save batteries. Simply connect one end of the 3.5-3.5 audio cable to the bottom of the left ear cup to your MP3 player. Inserting an audio cable disable the wireless functionality.

Low Battery Warning:

At power on condition, when battery voltage is lower than 3.0V, there will be a warning beep every 60 seconds.

Power-Off at Low Battery Condition:

At power on condition, when battery voltage is lower than 2.9V, the headset will switch off automatically.

DENVER[®]
denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type DENVER BTN-207 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address.

Please enter: www.denver-electronics.com and then click the search ICON on topline of website. Write modelnumber: BTN-207

Now enter product page, and red directive is found under downloads/other downloads.

Operating Frequency Range: 2402-2480MHz

Max Output Power: 14dBm

Imported by:

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

facebook.com/denverelectronics