

How to use your new Bluetooth speaker

Bluetooth mode

1. Press and hold the power button to turn on the speaker. After you hearing "Ding dong", the Bluetooth device is ready to pair.
2. On your smartphone, enable Bluetooth, search and select "DENVER BTS-210" to pair. After paired, "connected" is heard.
3. If battery has low power, the speaker will warn you with sound alarm
4. Charging: Connect to a DC 1A adapter, or to a USB port on your computer.
5. When charging: The red LED light up. When charging is complete, the red LED turns off.

FM radio

1. Press the M button to switch to FM radio mode.
2. Press briefly the pause button in FM mode to search and store FM radio stations automatically.
3. If radio reception is poor, connect a Micro USB cable/3.5mm Aux cable to work as an antenna.

Play from Micro SD card

1. Connect a Micro SD card. Play starts automatically.
2. Supports MP3/WAV format.
3. Press the M button to switch between Micro SD card, FM radio and Bluetooth mode.

Play from USB

1. Connect a USB stick. Play starts automatically.
2. Supports MP3/WAV format.
3. Press the M button to switch between USB, FM radio and Bluetooth mode.

Listen to an external device

1. Use the supplied 3.5mm AUX cable, connect the speaker to an external device (e.g. MP3 or smartphone)
2. Press the M button to switch to AUX mode.

Hand-free call

1. When a call comes, press briefly the "Pause" button to answer. Press and hold the "Pause" button to reject the call.
2. During the call, press briefly the "pause" button to hang up.

Attentions

Store and use this product at room temperature
Do not expose this product to rain or wet conditions
Do not self-dismantling, repair and transform the product
Do not use chemical solvent cleaner to clean the product
Do not place the lithium battery in the fire to avoid the risk of explosion

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Inter Sales A/S declares that the radio equipment type BTS-210 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.denver-electronics.com and then click the search ICON on topline of website. Write modelnumber: BTS-210. Now enter product page, and red directive is found under downloads/other downloads
Operating Frequency Range: 150Hz-18KHz
Max Output Power: 2x5W
Radio frequency: 87-108MHz
Bluetooth frequency: 2.402-2.480GHz

DENVER ELECTRONICS A/S

Omega 5A,
DK-8382 Hinnerup
Denmark

www.facebook.com/denverelectronics