


Quick Set-Up Guide

WIRING UP YOUR RADIO

*****IMPORTANT***** Please make sure the yellow wire is connected to the permanent live feed (+12V) of the vehicle battery for the preset memory's Disconnect negative battery terminal from battery before starting installation. Consult the vehicle owner's manual for proper instructions.

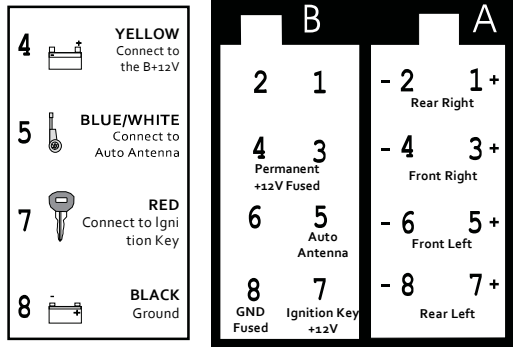

1. Install the Radio using the Din-Front Mount or Din-Rear Mount Method.
2. The Radio is equipped with ISO connector. ISO connector is the universal connector for the connection of car radio.
3. Make sure that you have a good chassis ground. Good ground connections will eliminate most electrical noise problems.
4. Please seek professional advice if you are inexperienced installing this type of product.

WORKING WITH THE UNIT

1. USB Flashdrive & SD Card

Simply plug your USB Flashdrive or SD Card (or both) into the USB socket/Card slot. The contents will be played automatically. These can be removed at any time.

2. Aux-in Jack

The front Aux-in Jack can be used for connecting additional audio devices (i.e. MP3 players/iPods) to the unit. The Aux-in cable (supplied with the unit) can be used for this connection. Simply connect one end into the Aux-in Jack and the other to your MP3/iPod.

3. Radio

Press the BND / ID3 button to select RADIO mode. Press the PTY button to select suitable band. You can press and hold the seek up/down button to search for your favourite stations, or you can press and hold the APS button to automatically scan the strongest stations and save them as presets.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Imported by:
DENVER ELECTRONICS A/S
Stavneagervej 22
DK-8250 Egaa
Denmark
www.facebook.com/denverelectronics